


12384 Werbetafel für Orchesternotenpulte

ZEIGEN WER MAN IST!

- Auf 80 x 52 cm haben Sie jede Menge Platz für Ihre Botschaft
- Leichte und sichere Montage der Haltebügel
- Schnelles Anbringen und Abnehmen der Tafel
- Keine Werkzeuge erforderlich
- Sehr vielseitig, da nicht an bestimmtes Stativ gebunden
- Aus leichtem und doch widerstandsfähigem Aluminium

Vielen Dank, dass Sie sich für dieses Produkt entschieden haben. Diese Anleitung informiert Sie über alle wichtigen Schritte bei Aufbau und Handhabung. Wir empfehlen, sie auch für den späteren Gebrauch aufzubewahren.

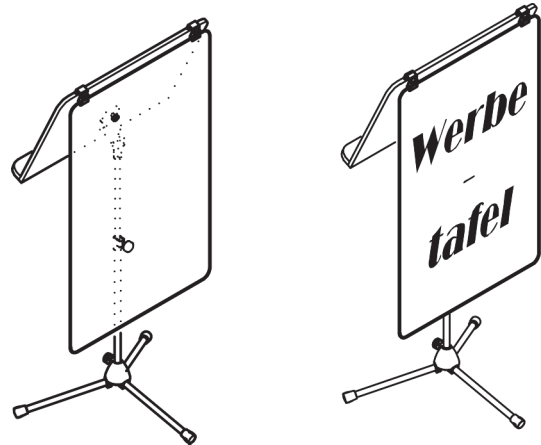

SICHERHEITSHINWEISE

- Auf ebenen und tragfähigen Stativuntergrund achten
- Geeignete Orchesternotenpulte verwenden, z.B.: KÖNIG & MEYER 118/1, 11888, 11899, 11950
- Die Neigung der Auflageplatte am Pult muss fixiert sein durch die fest angezogene Klemmschraube 1
- Beide Halteklemmen ordnungsgemäß an der Auflageplatte anbringen

MONTAGEANLEITUNG

- Zunächst wird das Stativ sicher aufgestellt. Dann folgt:
- 1 Den gewünschten Neigungswinkel der Auflageplatte einstellen und diese Position durch festes Anziehen der Klemmschraube sichern.
 - 2 Halteklemmen an der Auflageplatte ansetzen und die Klemmschraube so voreinstellen, dass genügend Luft bleibt um die Klemmen später leicht einzuhängen zu können.
 - 3 Einhaken beider Halteklemmen in die Schlitzlöcher der Werbetafel.
 - 4 Halteklemmen inkl. Werbetafel an die Auflageplatte hängen.
 - 5 Halteklemmen auf der Platte mittig ausrichten.
 - 6 Rändelschrauben der beiden Halteklemmen fest anziehen.

Der Abbau erfolgt in umgekehrter Reihenfolge.

BENUTZERHINWEISE

BESCHRIFTUNG

Die Werbetafel (aus Aluminium) ist mit einem Kunststoff überzogen, der sogenannten Pulverschicht. Diese eignet sich sehr gut als Unterlage für individuelle Beschriftungen - egal ob Sie die Tafel per Folie, Druck oder von Hand beschriften wollen.

NEIGUNGSVERSTELLUNG

Beim Verstellen der Neigung der Auflageplatte 1 empfiehlt es sich, die Werbetafel zuvor abzunehmen. Falls das nicht gewünscht ist, muss die Auflageplatte mit fester Hand gehalten werden um beim Lösen der Klemmschraube 1 das schlagartige Umkippen der Platte durch die Last der Werbetafel zu verhindern.

PRÜFEN, INSTANDHALTEN


- Bei Wartungsarbeiten auf evtl. Gefährdungen achten (Einklemmen, Umfallen, Anschlagen...).
- Zur Reinigung am besten ein leicht feuchtes Tuch und ein nicht scheuerndes Reinigungsmittel benutzen.

TECHNISCHE DATEN / SPEZIFIKATION


Material	Platte: Alu, schwarz, pulverbeschichtet Halteklemmen: Stahl, schwarz, pulverbe. Griffe, Druckstücke: PA, schwarz Gewinde: Stahl, verzinkt
Abmessung	Platte: B x H x T: 520 x 800 x 1,5 mm Halteklammer: 27 x 48 x 47 mm maximale Dicke der Pultplatte: 13 mm
Verpackung	Karton, Wellpappe
Gewicht	1,9 kg

IN AKTION

MONTAGE

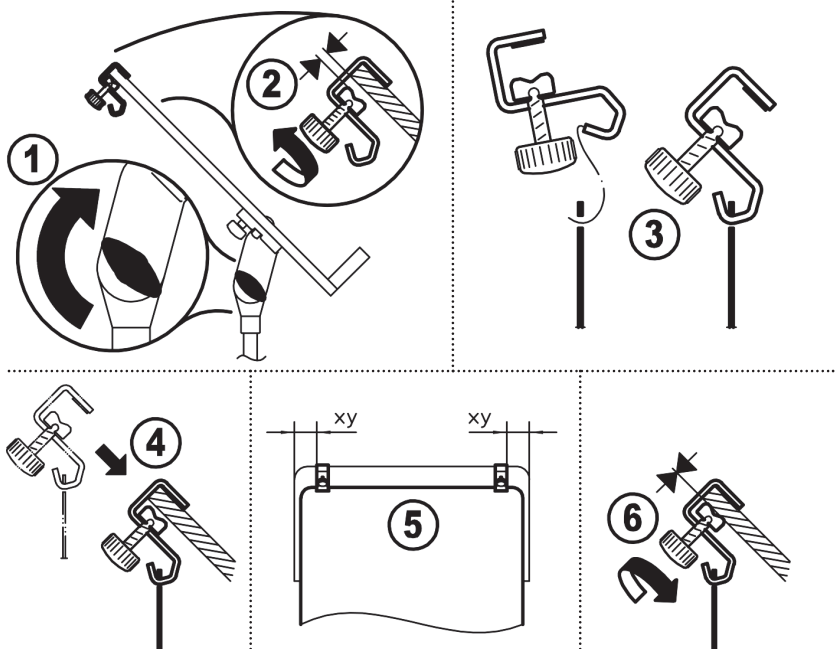

ABMESSUNGEN

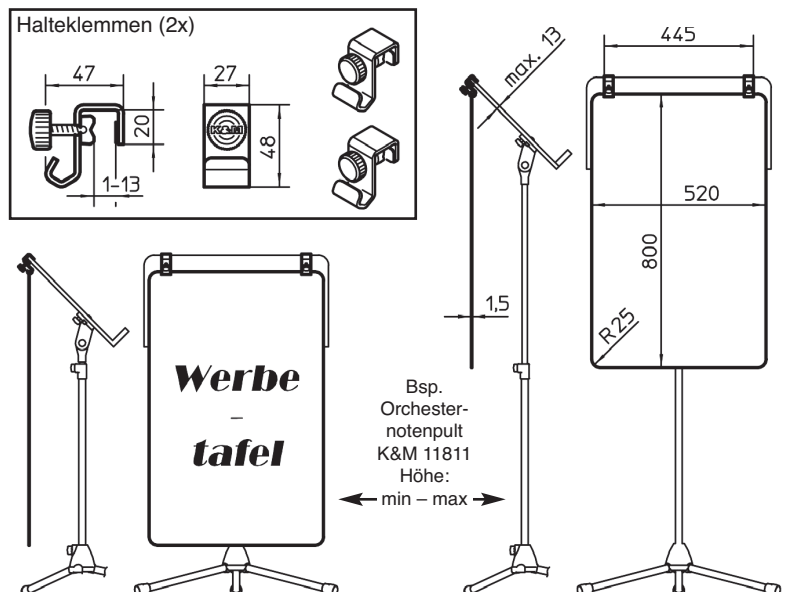

Bsp.
Orchester-
notenpult
K&M 11811
Höhe:

← min - max →

12384 Advertising panel for orchestra music desks

SHOW WHO YOU ARE!

- On a 80 x 52 cm panel you have plenty of room for your message
- Light and safe installation of the support arms
- Quick attachment and removal of the panel
- No tools required
- Very versatile, it is not stand dependent
- Made of light but very sturdy aluminum

Thank you for choosing this product. The instructions provide directions to all of the important set up and handling steps. We recommend you keep these instructions for future reference.

SAFETY NOTES

- Be sure that the stand surface is suitable and level
- Suitable orchestra stands like e.g. KÖNIG & MEYER 118/1, 11888, 11899, 11950
- The angle of the desk of the music desk must be attached by tightening the clamp screw 1
- Properly attach both clamps to the music desk.

MOUNTING INSTRUCTIONS

First properly setup the stand. Then:

- 1 Adjust the desired angle of the music desk and set the desired position by tightening the clamp screws.
- 2 Place the clamps on the music desk and preset the clamp screw so there is enough room to easily hang the clamps.
- 3 Hook in both clamps into the slits on the advertising panel.
- 4 Hang the clamps and the advertising panel onto the music desk.
- 5 Center the clamps on the music desk.
- 6 Tighten the screws of both stop clamps.

Disassembly is performed in reverse order.

USAGE NOTES

LETTERING/MESSAGE

The advertising panel (made of aluminum) is covered with plastic, so-called powder coating. This is an excellent background for individual messages - be it you wish to use foil, print or write the message by hand.

ANGLE ADJUSTMENT


When adjusting the angle of the music desk 1 the advertising panel should be removed first. If that is not desired, the advertising panel must be held to loosen the clamp screw 1 to avoid having the music stand fall over due to the weight of the advertising panel.

CHECK, MAINTENANCE, CLEANING

- In the event of workstation maintenance pay attention to possible risks (pinch / wedge a finger, the stand falls over, someone bumps into the stand...)
- To care for the product use a damp cloth and a non-abrasive cleaning agent.


TECHNICAL DATA

Material	Panel: Aluminum, black, powder coated Clamps: Steel, black powder coating Handles, pressure fittings: PA, black Threads: Steel, galvanized
Dimensions	Panel: W x H x D: 520 x 800 x 1,5 mm Clamps: 27 x 48 x 47 mm max. thickness of the music desk: 13 mm
Packaging	Carton, corrugated paper
Weight	1,9 kg

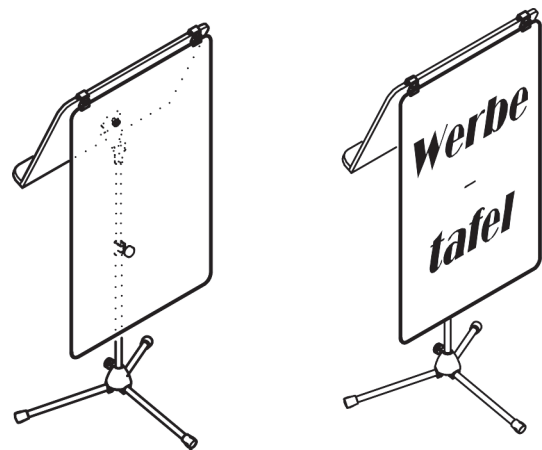

IN ACTION

ASSEMBLY

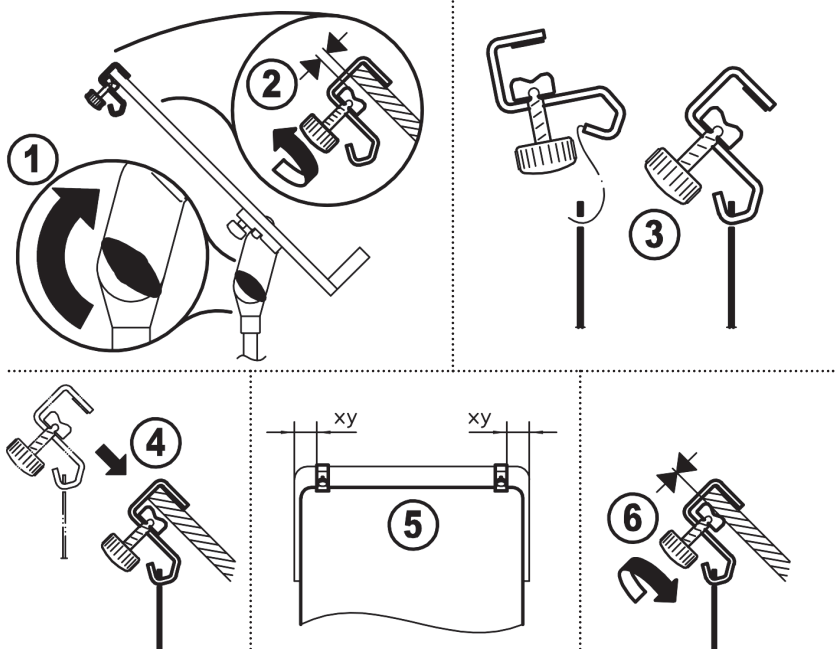

DIMENSIONS

